


# Anywhere Map Quadra Quick Start

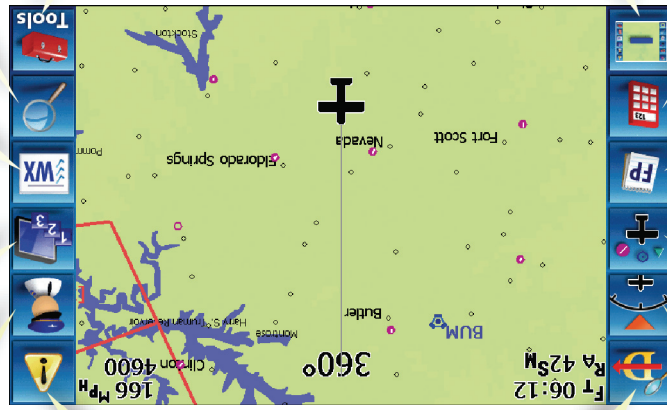

**Personal Digital Copilot:** Set up reminders to switch fuel tanks, lower gear and begin descent.

**Views:** Quickly select and modify preset map display configurations.

**WX Settings:** Show/hide XM WX items from the map display.

**Zoom/Backlight settings:** Preset zoom levels, backlight adjustment and night/day toggle.

**Emergency Mode:** Single tap to enter E-mode then pick airport and activate emergency decent VNAV.

**Tools:** Leaves map screen for setup of aircraft profiles and advanced functions including XM WX.

**Direct To Finder:** Search utility for airports, nav aids, fixes/intersections, and user waypoints.

**Toolbar show/hide toggle:** Show/hide left and right toolbars on edges of map screen.

**Flight Following:** Setup traditional heading bug, and altitude hold.

**Find Nearest:** Quick list closest airports, nav aids, fixes, Quadra center, AWOS, cheapest fuel, etc.

**Flight Plan Manifest:** Full details of flight legs, save/load flight plan, Route Wizard, or clear an existing flight plan.

**Flight Calculator:** Calculate density altitude, true air speed and winds aloft.


## Sample Flight Plan

Starting at Lakeland, let's fly to Cross City (KCTY). The most important button on the Quadra is the Direct To Finder, in the upper left corner. Use this button to create and modify flight plans.

1. Tap the Direct To Finder button, then tap the small white box that says "Enter Identifier..." The on-screen keyboard will appear.



2. Tap C then T, notice that KCTY is listed in the list. Either tap Y or tap KCTY in the list.  
3. The search screen says Cross City, now tap "Direct To" to create a new flight plan. You have just created a flight plan from the current GPS location to KCTY. It will now show on the screen.

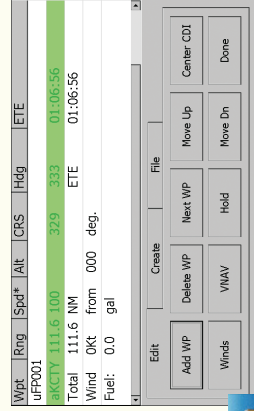

The "Flight Plan" button will open the manifest of this plan.

## Power Button

Press/Hold the Power button at the top right to turn the Quadra on or off.

Note: If the device is switched off while navigating on the ground or in the air, the GPS stops working. Consequently your position is not calculated, the track log is not saved, and the navigation stops.

When you turn the device on, your Quadra continues navigating as soon as the built-in GPS determines your location.



**Return Button**  
Returns you directly to the main Map screen.



**About Button**  
Displays the version of Anywhere Map software you're using along with the effective dates of the 28 day GPS mapping data installed.



**Exit Button**  
The exit button can be found by tapping on the "Tools" icon then choose "Settings". This closes the Anywhere Map software when you're done flying and ready to use the street navigator.

**VERY IMPORTANT:** Only use the supplied charger to power your Quadra. Most other Mini USB chargers will light the orange charging indicator but will not actually provide adequate power to the Quadra. Use of other chargers will result in the unit abruptly shutting down with no warning and a dead battery.